



STANDARD ELECTRICAL INSTALLATION WALL MOUNTED THERMOSTAT

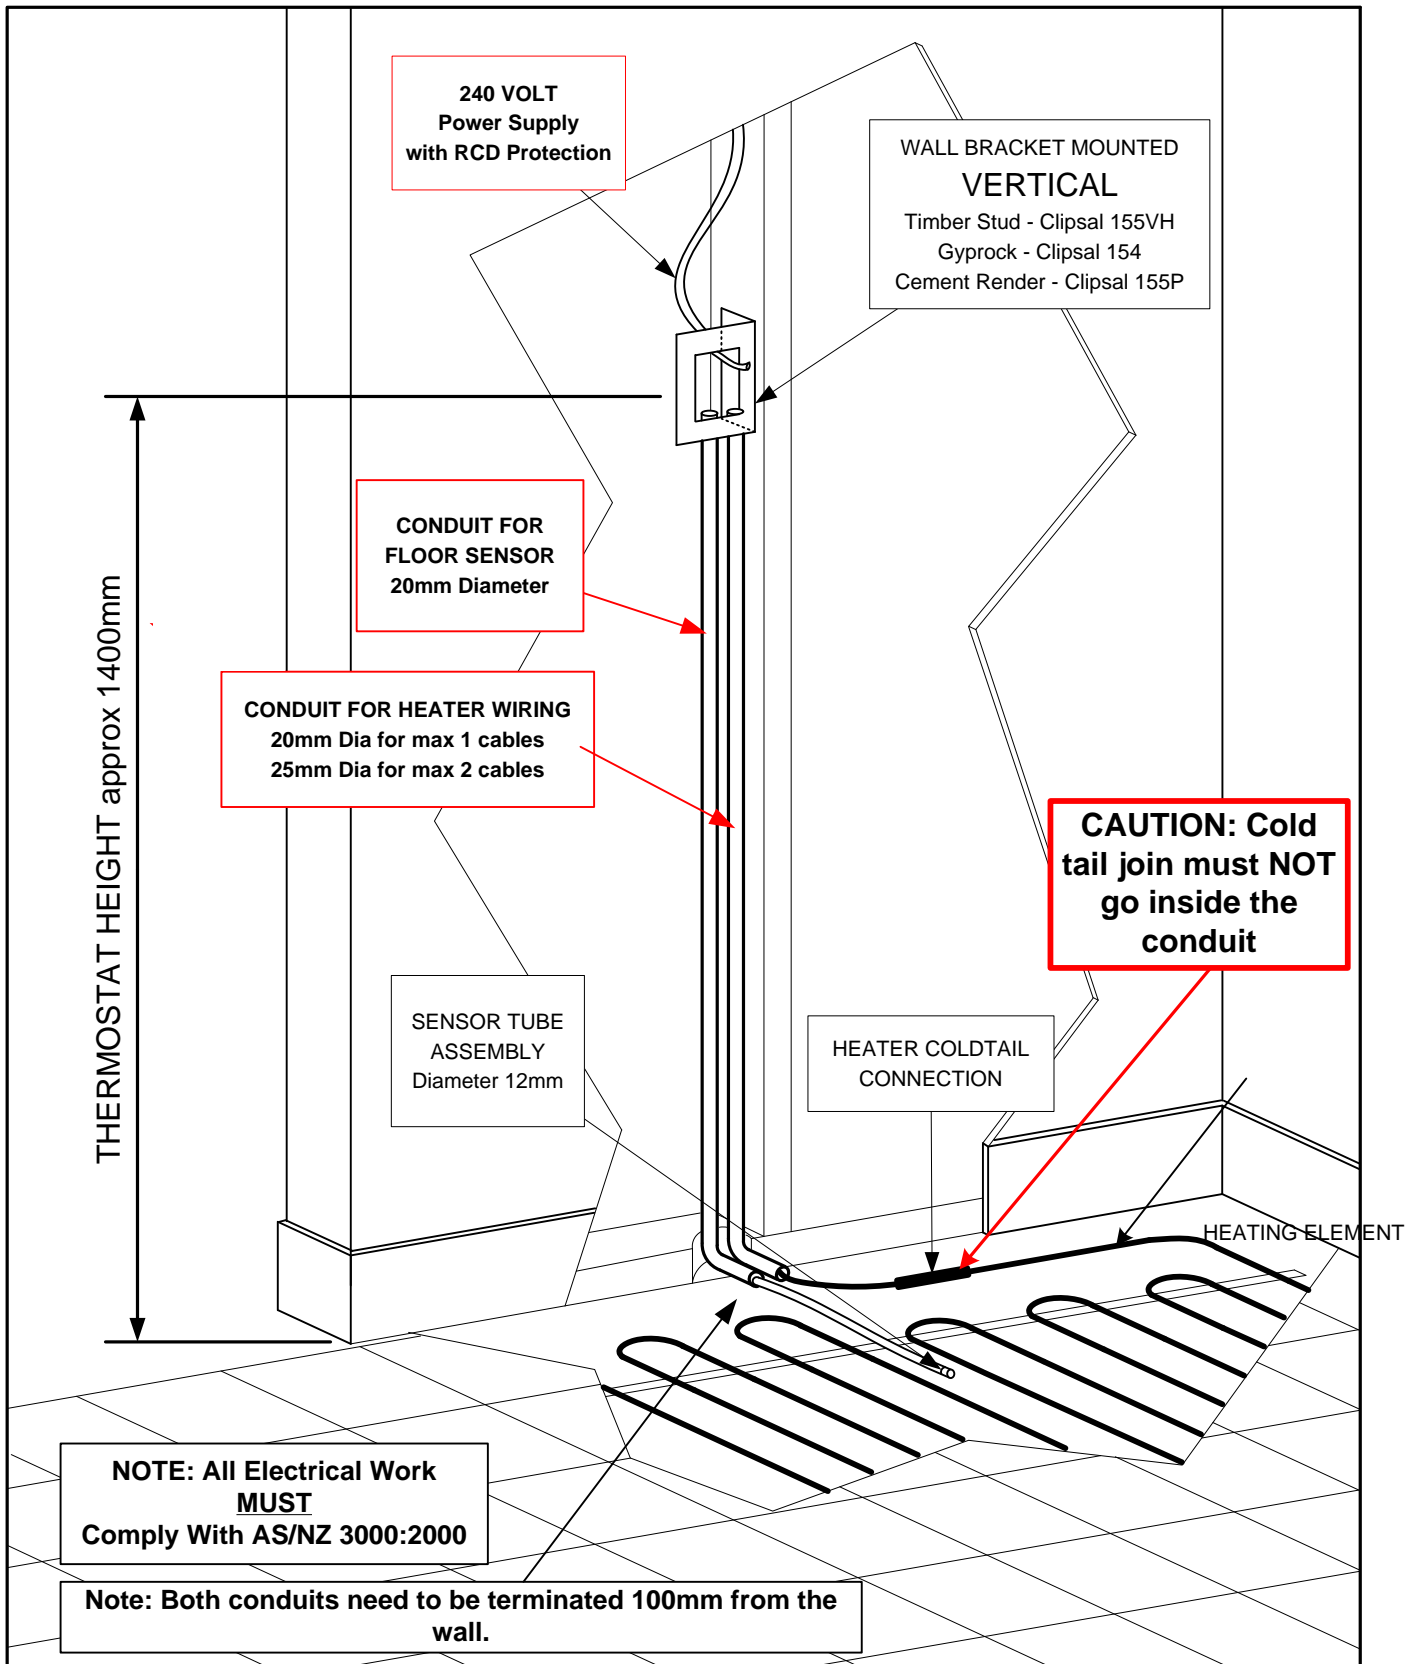

In 'Ultra Thin' heating applications the floor will need to be chased to allow the sensor tube and cold tails to be recessed into the floor. Once in place you need to glue it down.

Before water proofing, measure room and according to your supplied 'Design Layout', chase the floor to allow the floor sensor and cold tails to sit flush with floor level. Cable cold tails (5mm), and sensor tube location (12mm).

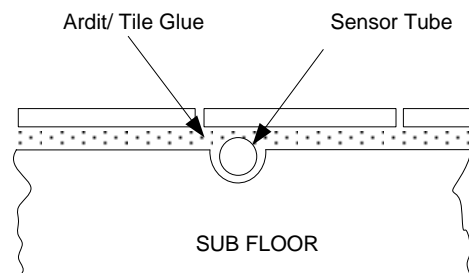

Ultra-Thin Chase Option