

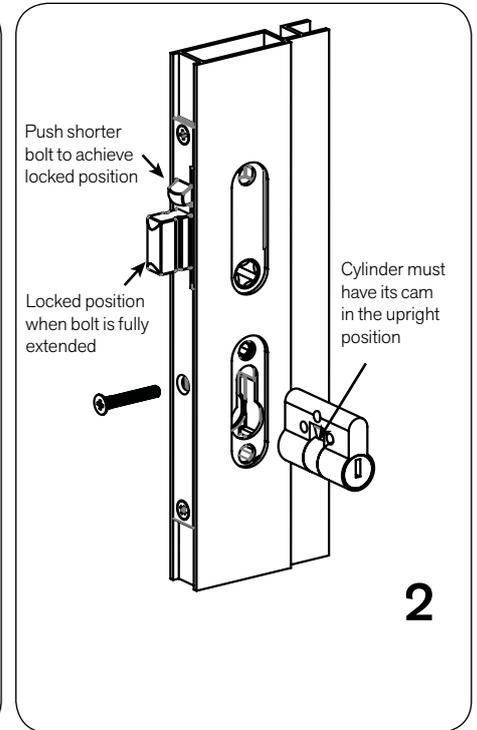


DS2075 Hinged Security Door Lock Installation Instruction

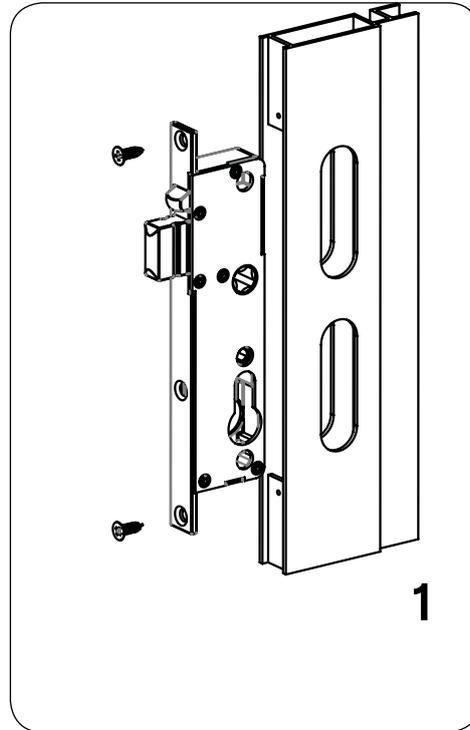



After sliding the Lock Body into the door cutout fasten with the two self tapping screws provided.

Ensure the cylinder cam is inside the cylinder & the locking bolt is fully extended, then insert the cylinder and fasten with the screw provided.

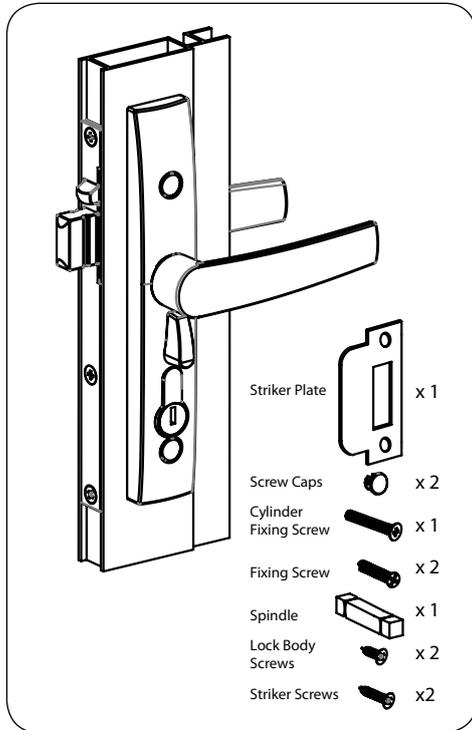

Insert the square drive spindle into the lock body. Then place the outer handle body (side without screw cap cutouts & snib) with its handle in the horizontal position. Then place the internal furniture set on, ensuring the handle and snib are both in the horizontal position. Fasten with screws provided and fit plastic caps to conceal screws.

A 20 mm hole must be made in the jamb to take the main bolt. This rectangular mortice cut out must be made central to the main bolt.

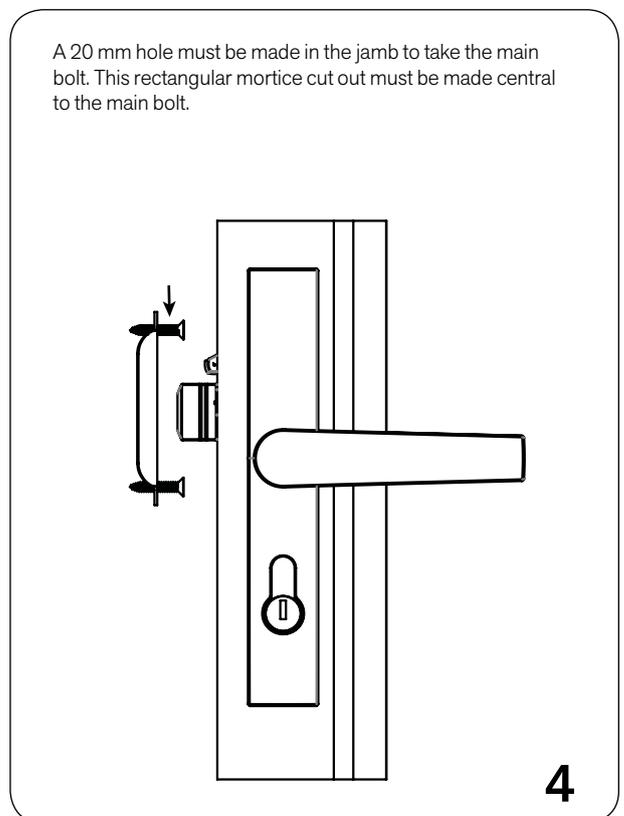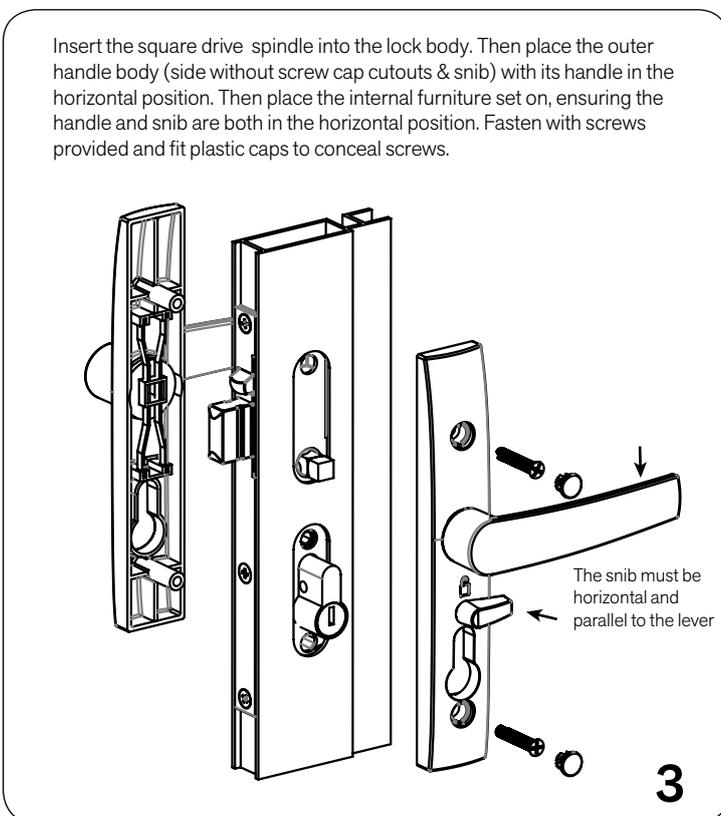

Head Office: 160 Newton Rd, Wetherill Park, NSW 2164

Ph: +61 9609 2555 | Fax: +61 9604 2910 | www.doric.com.au

ABN 68 000 577 195